


How To: Continuous Bander Users Guide



Marking Services Australia Pty Ltd.

Step 1

Cut banding to required length (at least 203 mm longer than pipe circumference), place clip on band and bend band under clip.

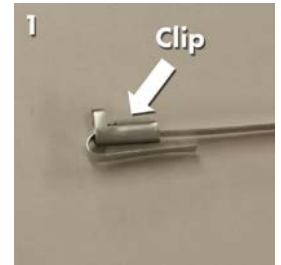

Step 2

Feed band through holes in carrier so the tabs on the clip point away from the pipe and carrier.




Step 3

Place band into slots on bander as shown in photo 3. Make sure that the band has been pulled snug as possible to the pipe and the toll is as close as possible to the clip. This will help avoid excess ratcheting to tighten bands.




Step 4

Ratchet the band to the desired tension then rotate bander forward over the clip, photos 4 and 5. This will hold the band in place after band is cut.

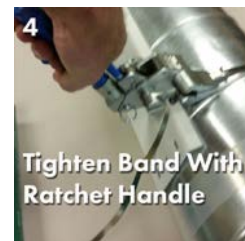

Step 5

Photo 6 shows how to use the built-in band cutter and photo 7 shows the band after it has been cut and the bander removed. Now push the cut end down between the tabs on the clip.

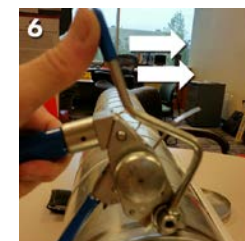

Step 6

Photo 8 shows how we use a pair of pliers or channel locks to bend the tabs over to capture the band. Photo 9 is the completed process.

